

rampCENTRE[®]

by Enable Access

Welcome[®]-Giant Half-Step

ALL NEW!

“ Making steps safe and manageable for ambulant, rollator and walking frame users! ”



So easy to choose, fit and use.



Seen the video?

Until now, the traditional half-step simply offered an ambulant user shallower step access.


The proven and now ALL-NEW Welcome®-Giant Half-Step reaches a new level!

This totally unique and intelligent range takes into account that people with various walking challenges need more workable solutions.




3 sizes...

MIDI

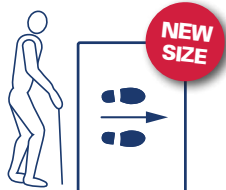


45cm (18ins)

LARGE

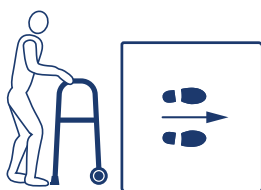

60cm (24ins)

EXTRA-LARGE

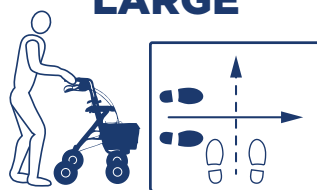

90cm (36ins)

To suit all requirements:

- **Walking stick?** If so, the MIDI is perfect!
- **Walking frame user?** Take a look at the LARGE!
- **Is a rollator being used?** The EXTRA-LARGE is the answer!

Take a look at page 6 for the easy product selector!

Quick Tip: The bigger the half-step, the safer and easier it is to use!



NEW Join Half-Steps

Higher thresholds can now be made safe and manageable for those with walking difficulties, simply by adding multiple shallow steps.

NEW Unique Optional Doorplate Accessory

Allows the step to be set flush with the top of the threshold, and eliminates the gap between the step and threshold



NEW Foot Options

Rubber feet and fix-down feet (required when using handrails) now supplied with every step as standard

NEW Height Extension Legs

Enables greater range of single and double step options



NEW Integral Safety Kerb with Every Handrail

Ensures feet or walking devices can't stray off the edge

NEW Three Substantial Sizes

Allowing walking device users to safely pause at the threshold

NEW Safety Toe Plate

With every Half-Step, to reduce risk and eliminate the danger of feet getting caught underneath the step



With or Without?

Useful Accessory Options - So Easy to Choose and Use!

- Handrails - none, one side, or both sides!
- Product kits for easy ordering

Take a look at page 7 for more information on the accessories

3 challenges solved...

1. Safe and Manageable Step Heights
2. Eliminate the Trip Risk of Raised Threshold Obstacles
3. Instant Safe Handrails

Even More User Benefits

- Safely pause at the door
- All door types including PVC
- No building work required

1. Safe and Manageable Step Heights



A single Welcome®-Giant Half-Step will instantly create a safe and manageable step for thresholds up to 30cm (12ins). Add handrails and other accessories as required for the specific user and application.

2. Eliminate the Trip Risk of Raised Threshold Obstacles



Unlike any other, the Welcome®-Giant Half-Step can be installed level with the top of the threshold and an optional doorplate accessory used to create a flush transition with no unsafe gaps or 'step-over' obstacle risk. This especially improves access for those with limited leg/knee mobility, drop foot or shuffling gait. The user simply steps up or steps down, rather than risking negotiating up and over the raised threshold.













3. Instant Safe Handrails

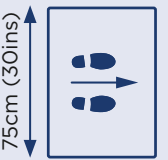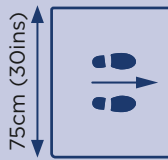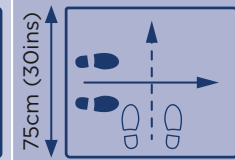

The multiple benefits of the Welcome®-Giant Half-Step solution include providing safe and instant handrails wherever required. Perfect for situations when attaching permanent grab rails or handrails to a property is not practical. It also removes the risk of falls from leaning over the step to reach a wall fixed grab rail.


The doorplate accessory is a great solution for curved or rounded steps.

Easy product selector


	MIDI	LARGE	EXTRA-LARGE
 <p>75cm (30ins) 45cm (18ins)</p>	 <p>75cm (30ins) 60cm (24ins)</p>	 <p>75cm (30ins) 90cm (36ins)</p>	
 <p>Ambulant All sizes are suited for ambulant use.</p>	✓	✓	✓
 <p>Limited Knee/Leg Mobility Larger sizes are more suited for limited knee mobility.</p>	-	✓	✓
 <p>Walking Frame Larger sizes suited to most walking frames.</p>	-	✓	✓
 <p>Rollator Extra-Large size is especially suited to most rollator devices.</p>	-	-	✓
 <p>Limited Space Where space is limited, choose Large or Midi sizes.</p>	✓	✓	
 <p>Outward Opening Doors Extra-Large half-step provides more space for safely pausing to open the door.</p>	-	-	✓
<p>Capacity The high capacity is also perfectly suited for bariatric use. Important note: 400kg capacity requires all feet to be securely fixed to the ground and requires connected handrails both sides if using height extension kit WHSLXK. Capacity is otherwise 300kg (47st).</p>	 400kg (63st)	 400kg (63st)	 400kg (63st)


Specifications and Accessories

HALF-STEPS


	MIDI	LARGE	EXTRA-LARGE
 <p>Giant Half-Step With 75cm anti-trip toe plate and rubber and fix-down feet Height range: 8 - 15cm (3.1 - 6ins)</p>	<p>WHSM 75 x 45cm (30 x 18ins)</p>	<p>WHSL 75 x 60cm (30 x 24ins)</p>	<p>WHSXL 75 x 90cm (30 x 36ins)</p>


ACCESSORIES

 <p>Handrail With integral safety kerbs. Fit to any side or opposite sides. Universal height: 90cm (36ins)</p>	<p>WHS45 45cm (18ins)</p>	<p>WHS60 60cm (24ins)</p>	<p>WHS75 75cm (30ins)</p> <p>WHS90 90cm (36ins)</p>
---	--------------------------------------	--------------------------------------	---



 <p>90cm Anti-Trip Toe Plate Provides additional trip protection on the long (90cm) Extra-Large Half-Step sides</p>			<p>WHSTP90</p>
--	--	--	-----------------------

 <p>Doorplate Closes the gap between the Giant Half-Step and the door frame Self-supporting for PVC frames</p>		<p>WHSDP75 75cm (30ins)</p>	
---	--	--	--

 <p>Height Extension Kit Extend any Giant Half-Step up to 20cm (8ins) high. Useful for 'building over' existing steps</p>		<p>WHSLXK</p>	
---	--	----------------------	--

 <p>Handrail Joiner Kit Join handrails of any two or more adjacent half-steps (2 pieces)</p>		<p>WHSRJK</p>	
--	--	----------------------	--

KITS FOR EASY ORDERING

	MIDI	LARGE	EXTRA-LARGE
 <p>Giant Half-Step Kit Giant Half-Step Kit with Hand Rail. Height range: 8 - 15cm (3.1 - 6ins)</p>	<p>WHSMR Includes: WHSM WHS45</p>	<p>WHSLR Includes: WHSL WHS60</p>	<p>WHSXLR Includes: WHSXL WHS90</p>
 <p>Double Giant Half-Step Kit Double Giant Half-Step Kit with Hand Rail. Height up to: 20cm (8ins)</p>	<p>WHSM2R Includes: 2 x WHSM 2 x WHS45 WHSRJK WHSLXK</p>	<p>WHSL2R Includes: 2 x WHSL 2 x WHS60 WHSRJK WHSLXK</p>	<p>WHSXL2R Includes: 2 x WHSXL 2 x WHS90 WHSRJK WHSLXK</p>



Ask for copies of our handy A5 Ramp Guide flyer for your colleagues and clients.

Includes all main RampCentre ranges including ramp sizes and gradient information.



For product selection advice and stockist information, contact us now:



Marshmoor Works | Great North Road | North Mymms | Hatfield | AL9 5SD | UK

T. +44 (0)20 8275 0375 E. sales@enable-access.com

www.enable-access.com

Enable Access, RampCentre and Welcome are registered trademarks of Enable Access. These and all other product names, codes and images must only be used in reference to products supplied by Enable Access. We undertake a policy of continual review and research, which may lead to changes in product appearance and specification. Information is given for guidance only. Customers take ultimate responsibility for purchasing decisions. All dimensions, weights and conversions are approximate for your easy reference only and specific risk assessments (including all manual handling assessment and product use issues) should be carried out by the customer prior to use of the equipment supplied. Stated capacities apply for combined weight of mobility devices and/or passenger/attendant. © Copyright Enable Access Ltd.

WHS08/20